


CONVERSION Right-hand to left-hand operation

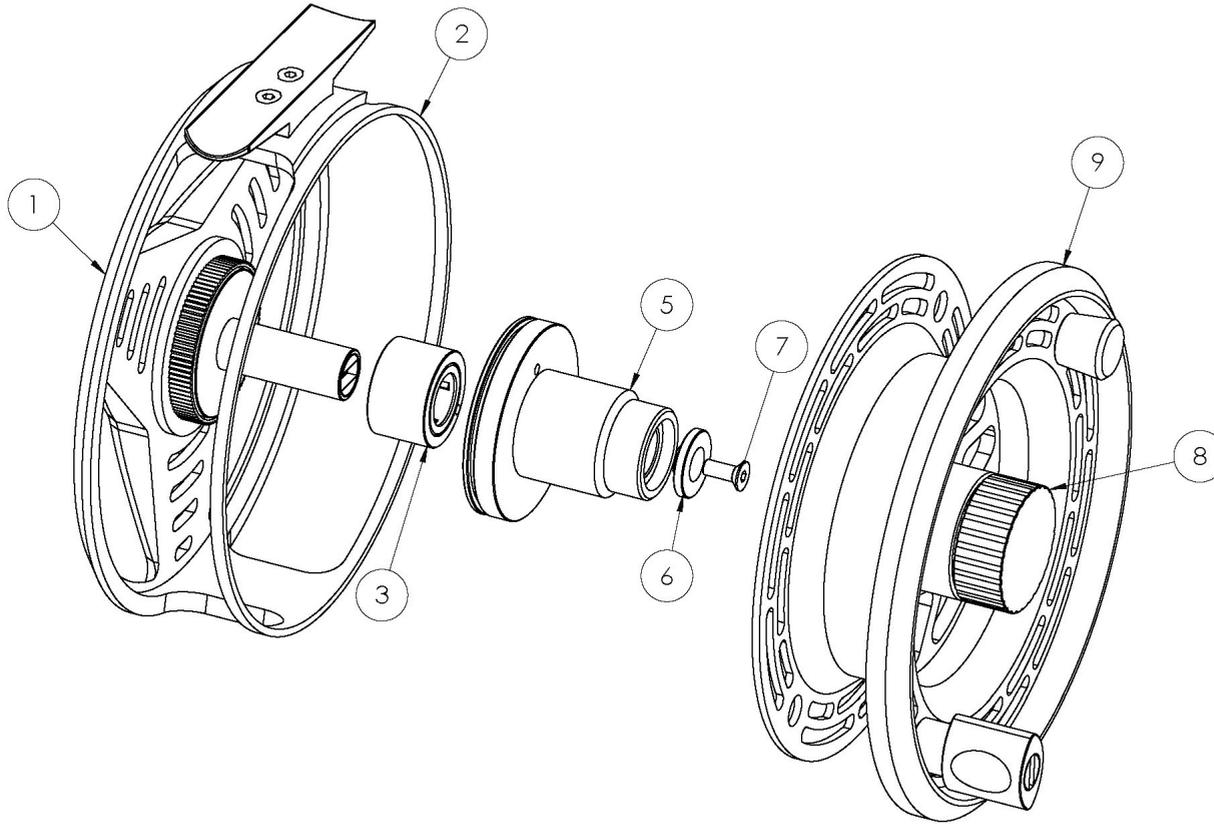

1. Loosen the drag wheel (1), so that there is no drag.
2. Unscrew the spool nut (8) and take the spool (9) out of the frame (2).
3. Remove the screw (7) and take off the locking washer (6).
4. Take off the free running axle (5) and pull out the brake axle (3).
5. Take the bearing with sleeve (4) out of the free running axle (5) and re-insert the other way round.
6. Insert the brake axle (3) in the free running axle (5) and reattach the free running axle.
7. Attach the locking washer (6) and tighten with the screw (7).
8. Insert the spool (9) into the frame (2). Make sure that the catch on the spool is engaged in the notch of the free running axle.
9. Attach the spool nut (8) and tighten



salmologic